



0) - Close the zipper of the door
 - Release all ground attachments
 - Prepare pole

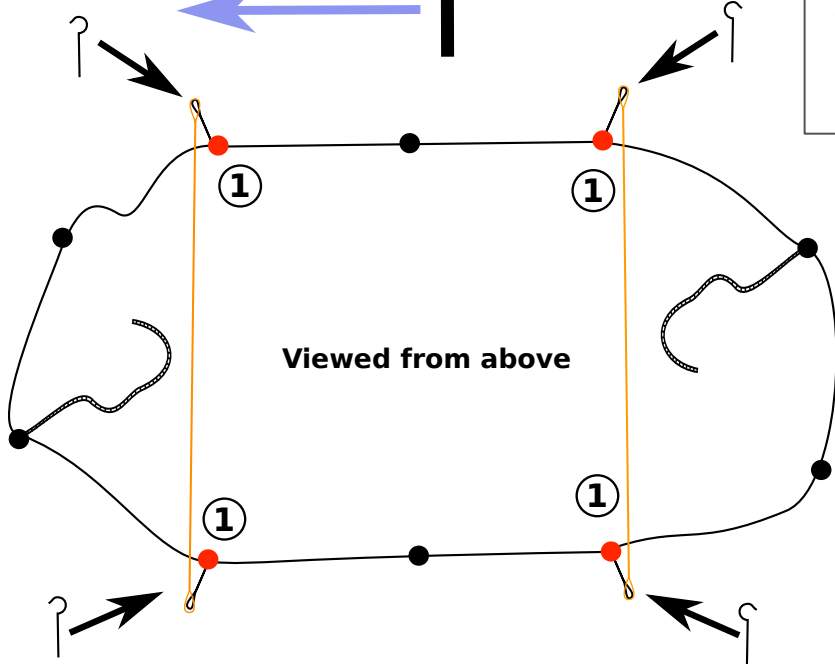

1) - Spread the rainfly on the ground
 - Pitch the red attachments as a rectangle
To get the proper width, use the included red webbing
 - Remove the red webbing

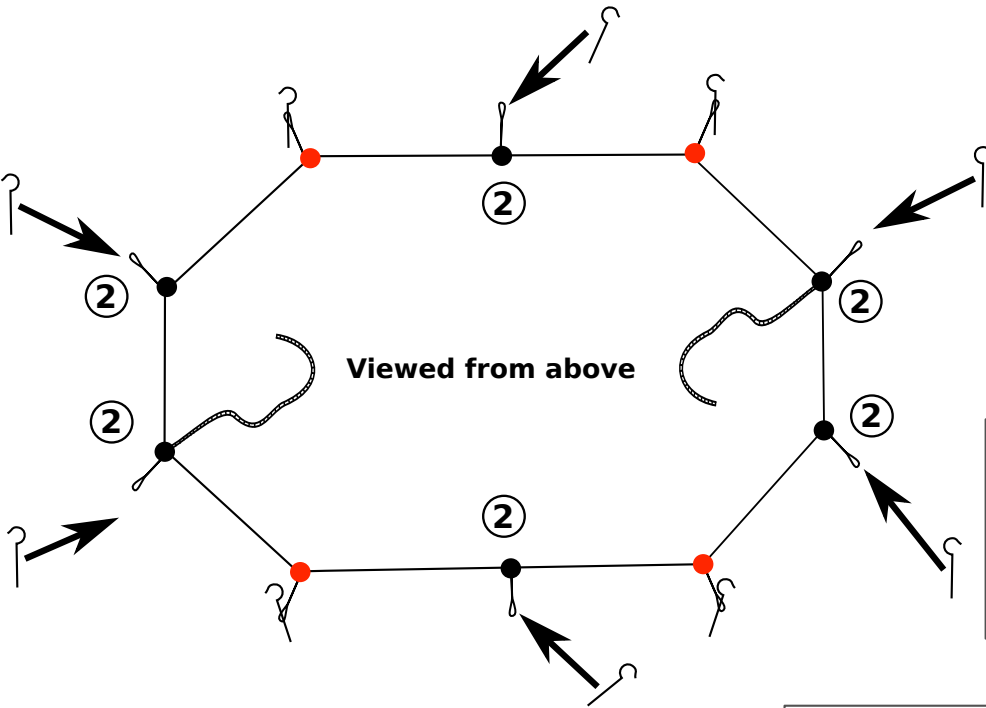


2) - Pitch door pegs
 - Pitch lateral pegs
*Tension should be **light** : if tension is high the rainfly will get close to the ground, resulting in a lower pitch and poor inner space*

3) - Open the doors and put on the poles
 - Adjust pole height to get maximum tension on the rainfly
 - Adjust attachments if necessary
 - Pitch guylines if necessary

Warning: the rainfly is NOT designed to handle poles with sharp points like tips of trekking poles. Always use the handle side of your trekking pole.


Sideview

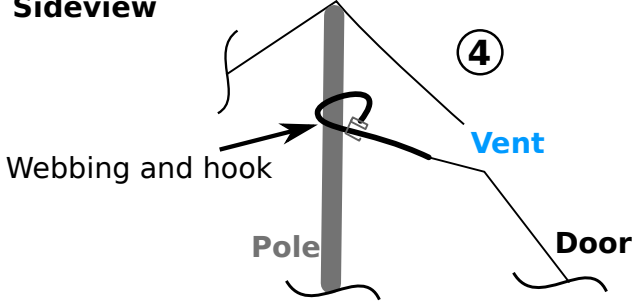

4) Vent : Open the upper side of the door and use the inside hook to attach it around the pole. Use the zipper sliders to adjust the size of the vent


Orlu - Pitching instructions

Inner tent

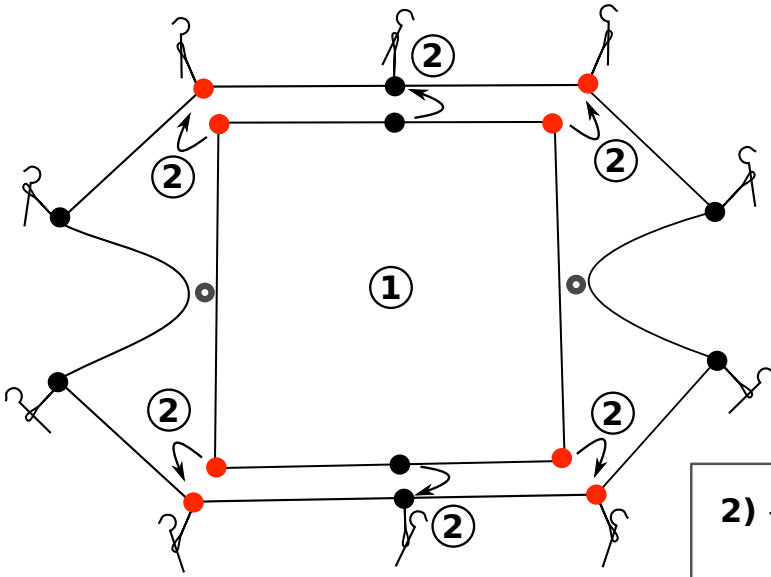

1) Inside the rainfly, spread the inner tent with the zippers facing the entrances

2) - Attach the inner tent to the rainfly with the matching colors
- Adjust to center and get a light tension between each points

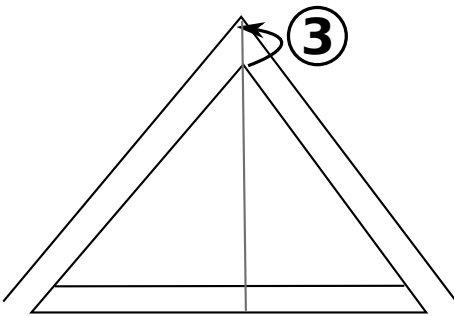

3) Clip both upper attachments and adjust


If needed, adjust the lower attachments used in (2) from the outside of the tent

Warning : If you put too much tension on the inner tent, it may release tension on the rainfly and therefore lower its wind resistance


If the upper part of the inner tent is insufficiently tensioned, try releasing the lower attachment and adjusting the upper attachment.

Montage indépendant de la chambre intérieure

- 0) Spread the inner tent on the ground
- 1) Pitch it using the loops of the lower attachments
- 2) At the top, use the hook to make a loop and attach it on the pole
- 3) Attach a guyline at the top of each pole and pitch it on the ground

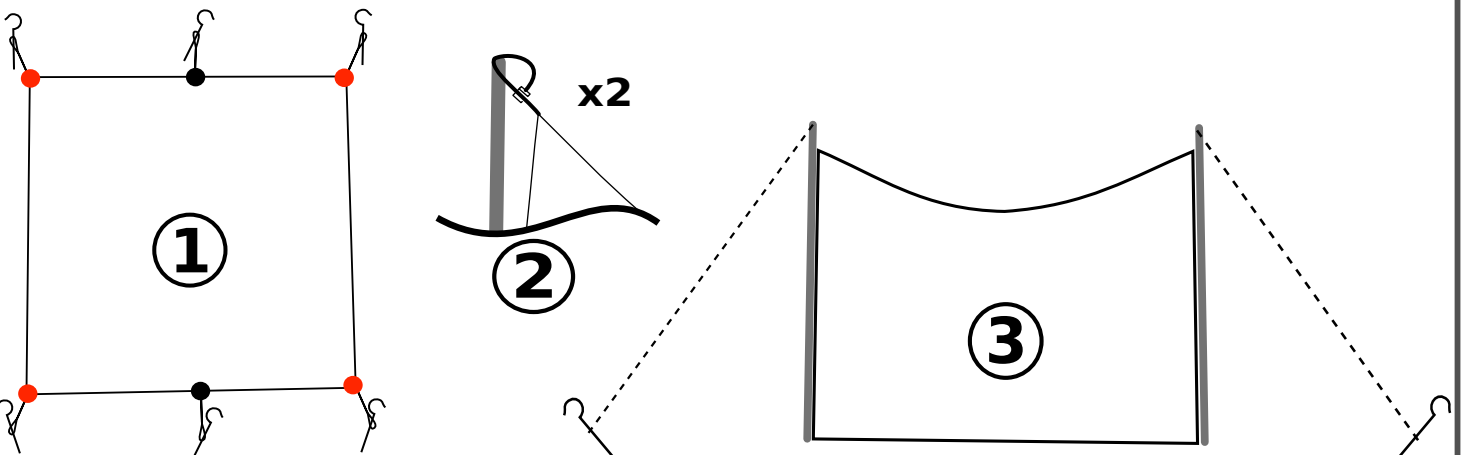


Frequently Asked Questions

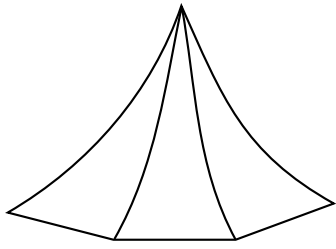

1/ My tent is well tensed but the ridges are curved and we have less room inside.

=> The central pole is too short, or the anchor points are too far from the center. Release tension on the anchor points and increase pole length.

In order to avoid this, put less tension between the pegs during setup and use a higher pole.

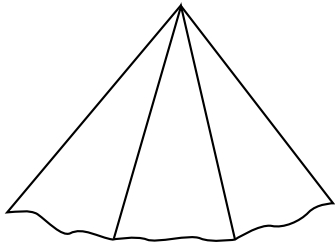

2/ The ridges are well tensed, but there is not enough tension between the anchor points.

=> The pole is too long. Decrease its height and increase tension on the pegs.

In order to avoid this, put more tension between the pegs during setup.



The right and left back corners of the innertent are not well tensed :

- Completely release tension on ALL attachments of the innertent.
- Tense the attachments of the problematic corners, and then the upper attachment.
- Slowly tense the remaining corners to get overall good tension

=> If this method is not sufficient, then the rainfly pitch should be amended : Release tension on all attachment (you may have to change location of the pegs), increase pole height, re-tense the problematic corner attachment and then the other attachments.

Pegs pitching technique :

Drive the pegs into the ground by hand or by gently pressing them with your foot. Only the **Rockpin** pegs can be **reasonably** pounded into the ground.

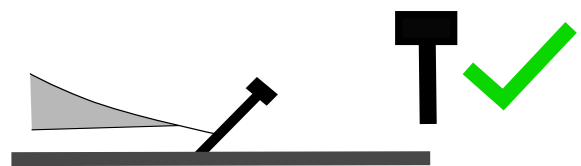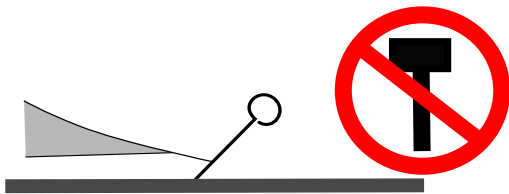


=> The angle between the peg and the tent attachment should always be higher than 90°



If you camp on sand or loose ground, do not hesitate to use several pegs on the same attachment with different lateral angles for a better hold. On hard ground, put heavy objects (rocks, bags full of sand or water) in front of the peg to keep it from being pulled away.

These must NOT touch the rainfly, they should be placed only on the cord or the strap of the peg.

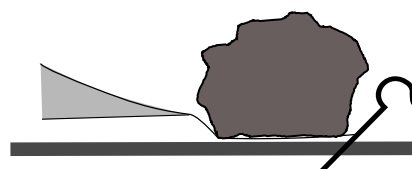

Avoid Condensation !

=> Open the vent to its maximum and keep space between the rainfly and the ground to allow air to circulate in the tent. Cook and eat outside of the tent.

Avoid campgrounds near bogs, rivers or lakes. Use a full groundsheet to cover all the ground under the tent.

Folding your tent

For better compactness, it is advisable to fold the ground fabric of your inner tent. You should change your folding pattern each time to avoid premature wear on the bending points.

The rainfly can be directly (gently !) stuffed inside the bag.

Always use a bag for your tent before putting it inside your main pack : this will greatly increase the lifetime of your tent and avoids tears and abrasion.

Storage

Your tent can be folded while wet during your hike, but you must store it dry to avoid molds.

You should also avoid storage in very hot places (behind the window of a car).

Care

Dirt and especially sand are the first cause of zipper failure : grains get stuck between the links and ruin the sliders at each passage. For a long zipper lifetime, you should clean them from sand and dirt when needed (you can do so with an old toothbrush).

The tent can be cleaned with clear water and a towel or sponge. Do not use soap or detergents.

Small repairs

Small tears and holes on the **ground fabric** of the innertent can be repaired with the field repair kits of your inflating mattress. You can also use PU glues like "seamgrip" that can be found in most hiking shops.

Small holes or re-waterproofing of seams of your **rainfly** can be done with silicone glues like "silnet" (you can apply it on both sides of the fabric). In case of a tear it is advisable to contact us for repair.

Sliders that fail to close your zip can often be repaired with small pliers. It is also possible to replace these sliders : reference is "YKK size #5" for all except reinforced tents "R" which use "YKK size #8".

If the links of your zipper are failing, then the whole zipper needs to be changed.

Do not hesitate to contact us for counsel. We also make repairs at reasonable prices.